


Panels

Knee Space

- 890mm Standing Height
- 730mm Sitting Height
- PVC edging on all sides


| Part# (Standing HT) | Part# (Sitting HT) | Width (mm) |
|------------------------|-----------------------|---------------|
| K106000 | K206000 | 600 |
| K107500 | K207500 | 750 |
| K109000 | K209000 | 900 |
| K110000 | K210000 | 1000 |
| K112000 | K212000 | 1200 |

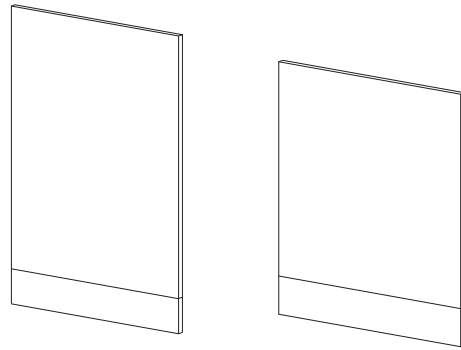

Side Panels/Back Panels

- 785mm Standing Height
- 625mm Sitting Height
- PVC Edging on all sides


| Part# (Standing HT) | Part# (Sitting HT) | Width (mm) |
|------------------------|-----------------------|---------------|
| P10560S | P20560S | 560 |
| P10710S | P20710S | 710 |
| P10860S | P20860S | 860 |
| P11000S | P21000S | 1000 |
| P11200S | P21200S | 1200 |

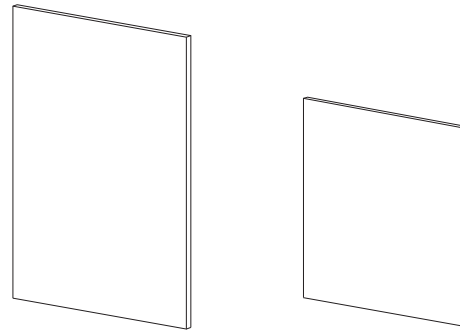

Front Panels

- 890mm Standing Height
- 730mm Sitting Height
- PVC edging on all sides

| Part# (Standing HT) | Part# (Sitting HT) | Width (mm) |
|------------------------|-----------------------|---------------|
| P10080F | P20080F | 80 |
| P10150F | P20150F | 150 |
| P10300F | P20300F | 300 |
| P10450F | P20450F | 450 |
| P10600F | P20600F | 600 |

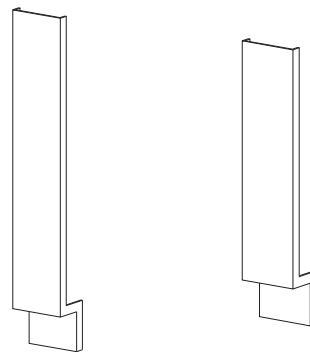

Corner Panels

- 890mm Standing Height
- 730mm Sitting Height
- PVC Edging on all sides

| Part# (Standing HT) | Part# (Sitting HT) | Width (mm) |
|------------------------|-----------------------|---------------|
| P10150C | P20150C | 150 |
| P10300C | P20300C | 300 |

